






Contents:

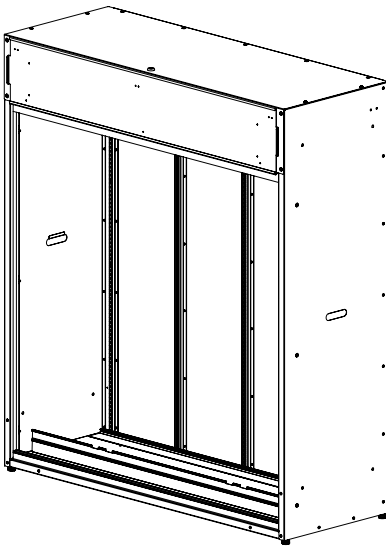


4' Metal Cabinet

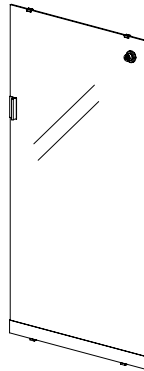

(1) Sliding Door
with Lock

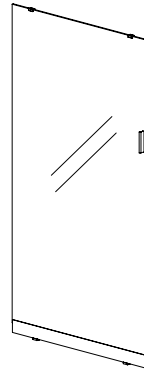

(1) Sliding Door
without Lock



(2) Key Set

402148 LP Cabinet Ganging Kit



(4)
1/4-20
KEPS Zinc
Nuts




(4)
Spacers




(4)
1/4-20x3/4
PHPMS Zinc
Screws


1. Position metal cabinet(s) on the floor per store planogram. Adjust levelers as need to align cabinets prior to fastening together.

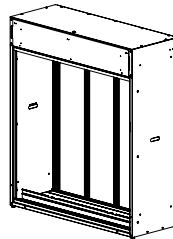

2. Attach metal cabinet to adjacent metal cabinet(s), if applicable. Fasten together using supplied Hardware Kit as shown, then slide into final position.

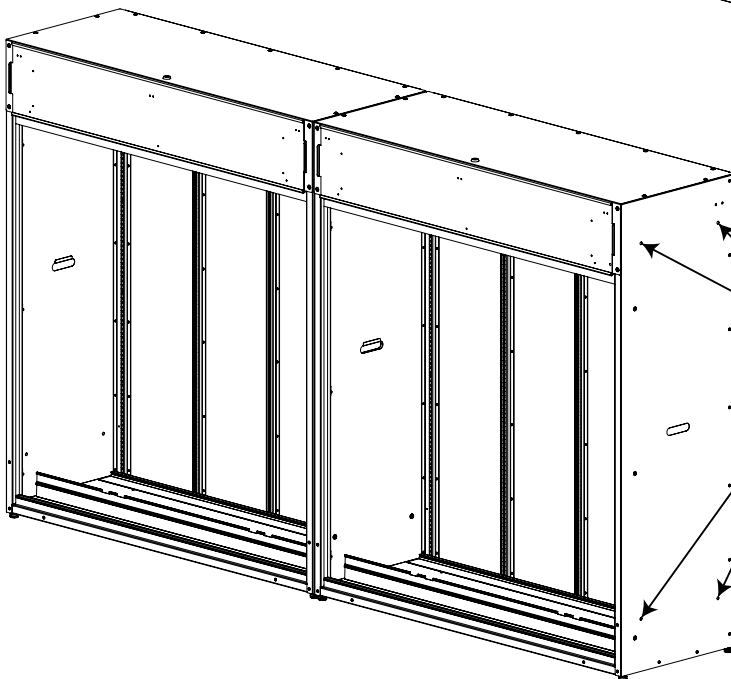

Fasten Fixtures
together at these
(4) locations.



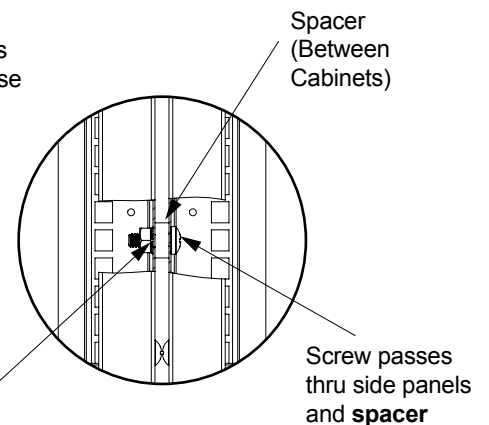


-Cut Away View-




3a. Once Sliding Door Cabinet is secured to other fixtures, install shelving (if applicable) into uprights per store-specific planogram. **Install bottom row of shelving first.**

3b. Install shelf molding per store-specific planogram. Shelf molding can be adjusted by sliding left or right.

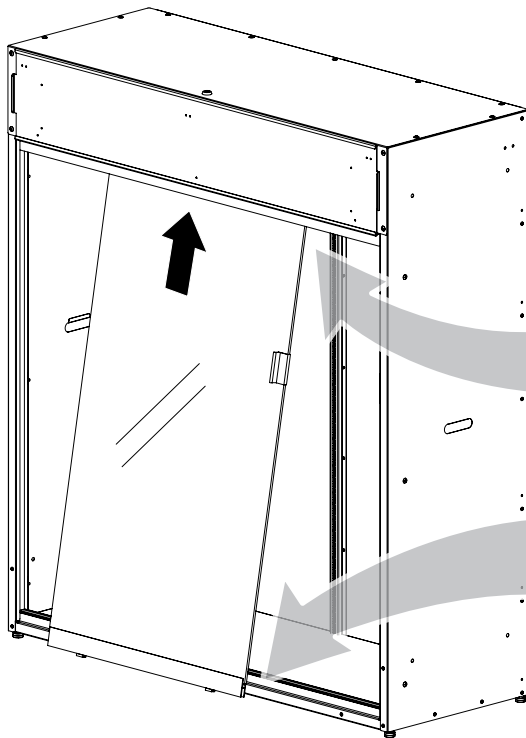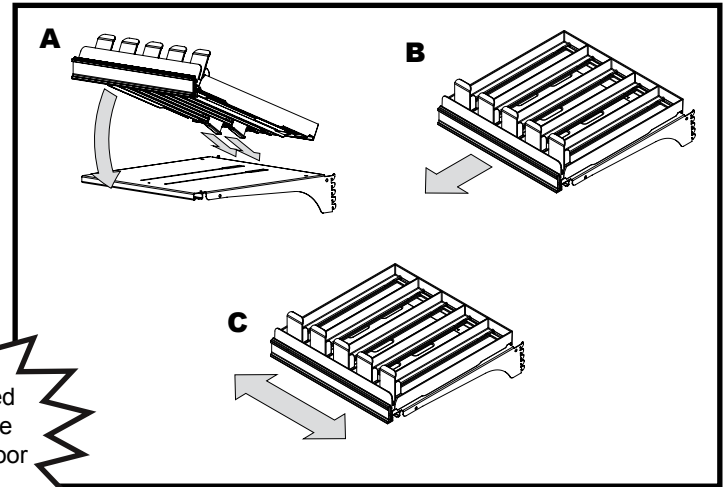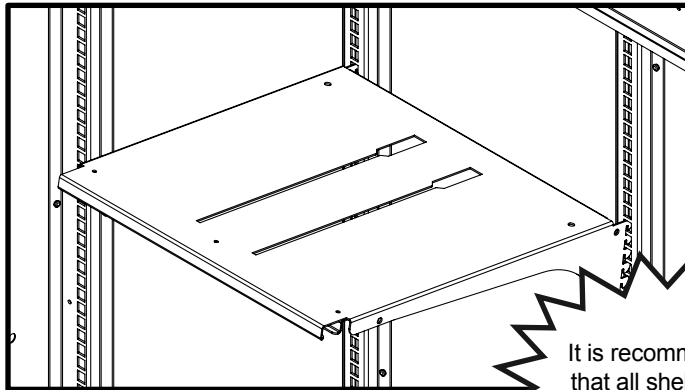



4a. Insert Door Panel without Lock (Door handle on the right) up and into **Top Rear Channel**, centered about Cabinet as shown.

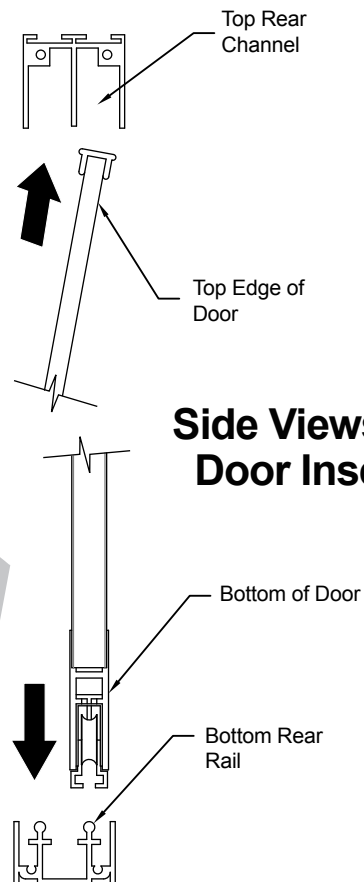



- 4b.** Drop door into onto bottom rear rail.
Slide left and right until the catches fall into the notches and the door sits on the rail.

Repeat steps for installing door with lock
(Door handle on the left) into front channel and front rail.

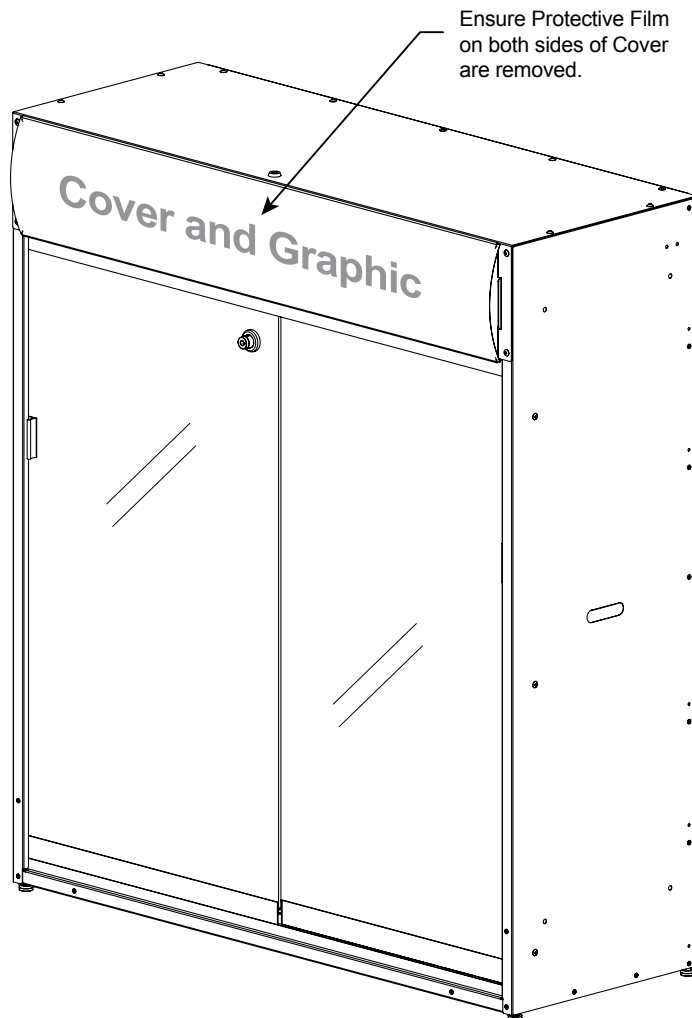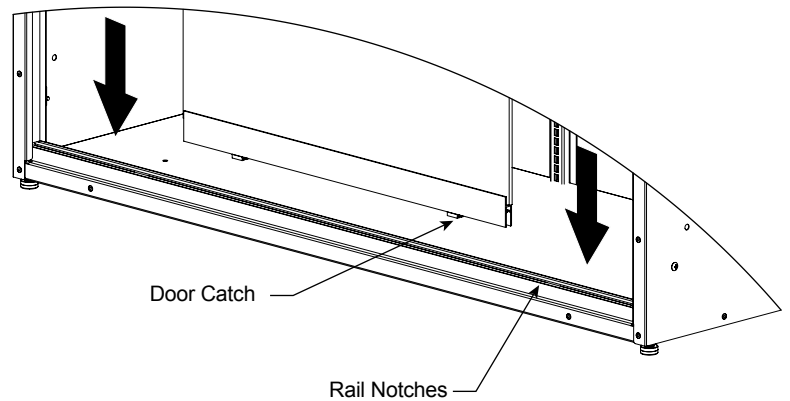

- 5.** Insert Clear Lens Cover and Header Graphic (not supplied) into Bottom Channel and bow into place in Top Channel. Header area can accept a graphic (not supplied).

- 6.** Load product according to customer specific planogram.