

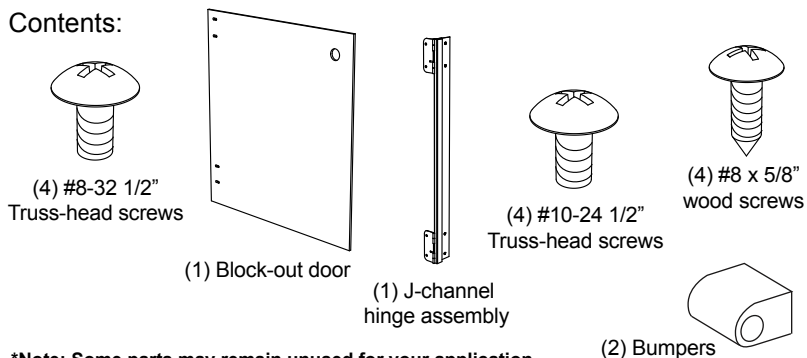


Contents:

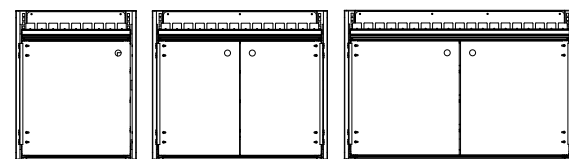

***Note: Some parts may remain unused for your application**


***Note: For wood cabinets,** install (4) #8 x 5/8 wood screws in pre-drilled holes.

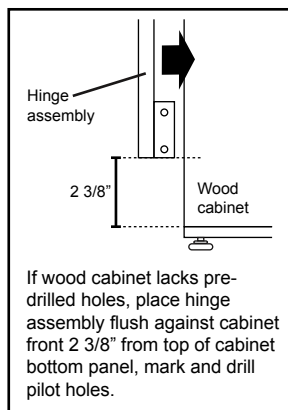

Cabinet/Fixture Configurations


Notes: Except where noted, assembly process identical for metal fixtures or wood cabinets (metal fixtures shown).

Hinges can be installed on left or right side of fixture. For use on right side, simply flip hinge and install as shown.

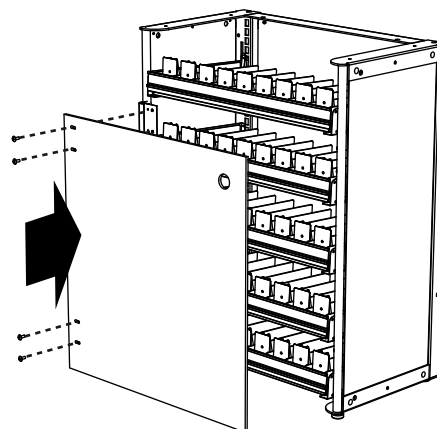


1. Attach J-channel to inside of upright with (4) #8-32 1/2" truss-head screws.

2. Attach door to J-channel with (4) #10-24 1/2" truss-head screws. Do not tighten screws at this time.

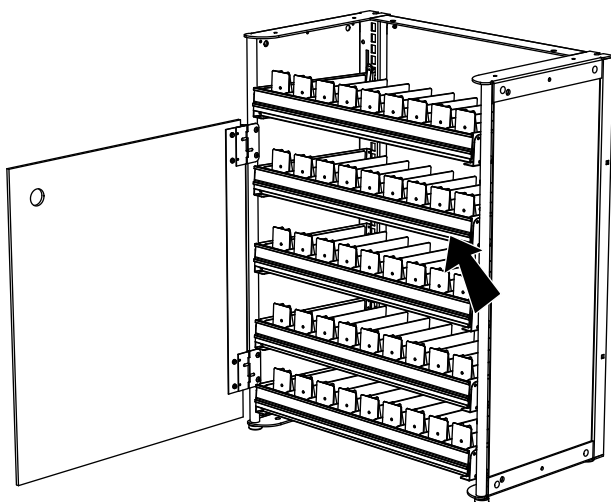

3. Open door and affix bumper on lower portion of shelf channel at location shown.

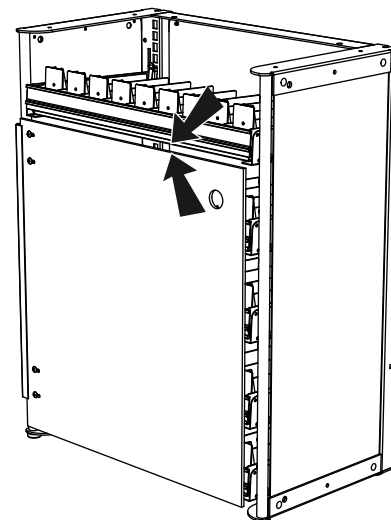

4. Align door horizontal with shelves. Tighten screws to secure.