



NOTE: If Security Back Panels are needed, remove Lower Braces prior to telescoping to the correct 88" height.

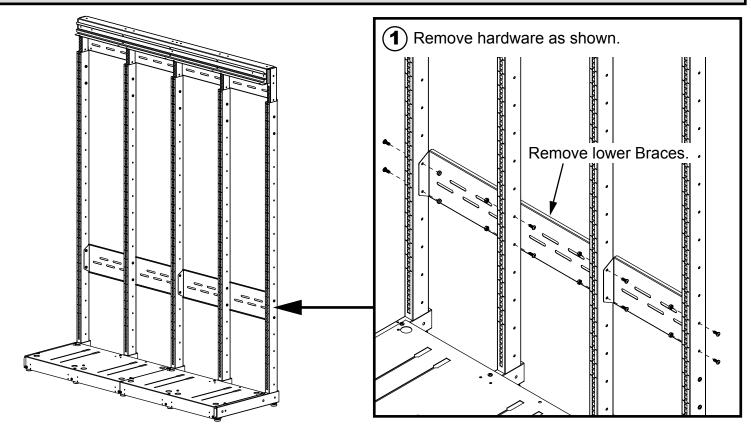

2 Telescope fixture to 88" height. Secure uprights as shown.

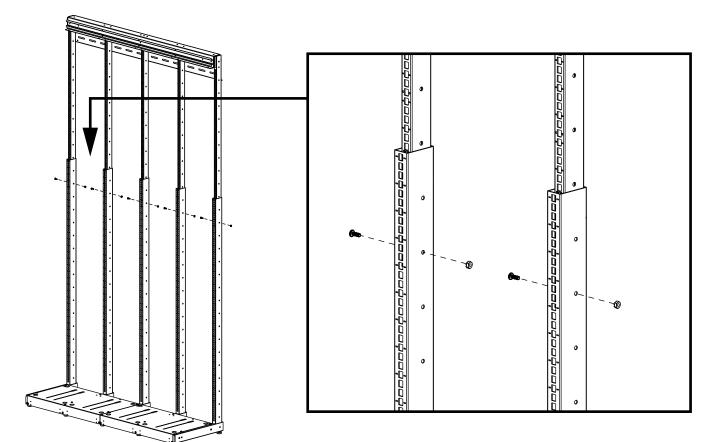

3 Assemble Upper Back Panel (A) and Lower Security Back Panel (B) (Flanges face forward) with hardware in the shown locations.

